


Service Schedule

Chevrolet Cruze Sedan



**COMPLETE
CARE**

- 1. This Service Schedule will have preference over the Owner's Manual and Warranty & Service Guide**
- 2. Refer to the Warranty and Service Guide for Severe Driving Conditions.**
- 3. Consult the Owner/Customer prior to any additional work being carried out as an additional cost will be charged for items not covered under warranty.**
- 4. ALL SERVICE INTERVALS ARE LINKED TO KILOMETERS AND MONTHS, WHICHEVER OCCURS FIRST.**

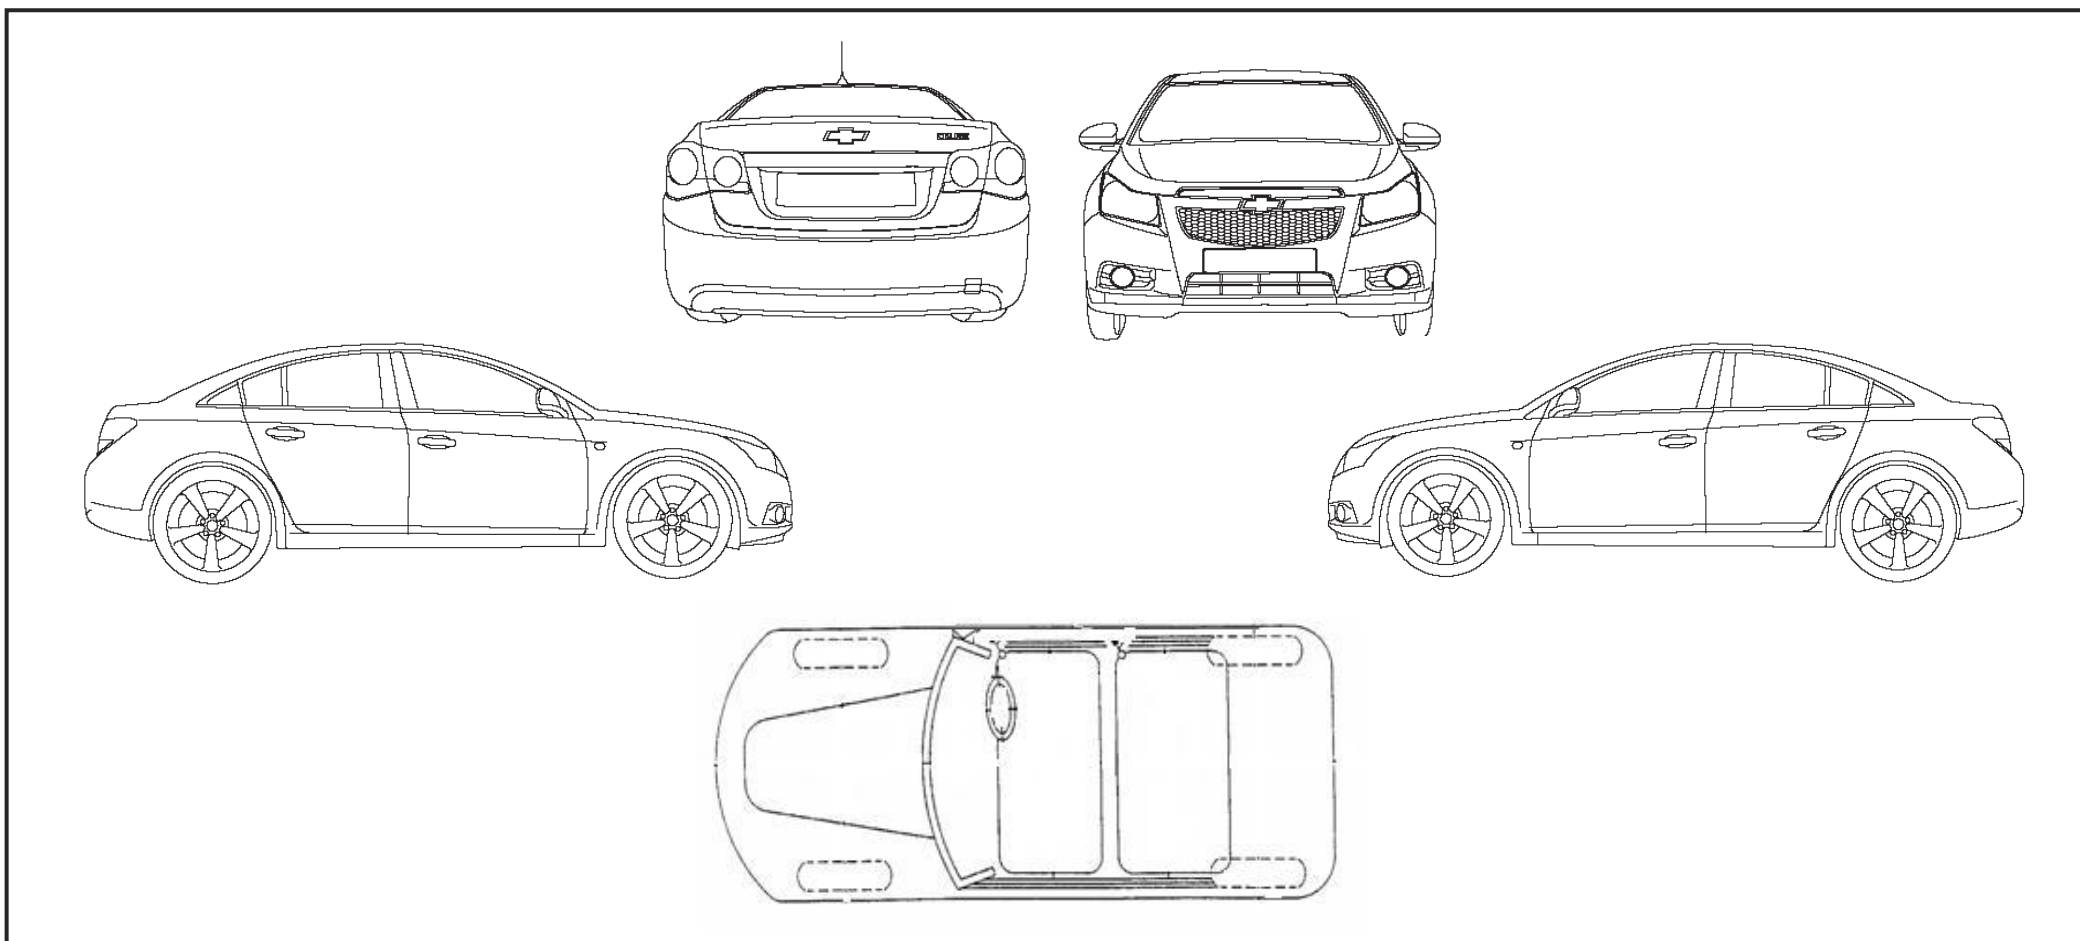

Service Schedule

Chevrolet Cruze Sedan



COMPLETE CARE

R = Replace A = Adjust T = Torque L = Lubricate C = Clean

I = Inspection - after inspection clean and correct, or replace as necessary

| Cruze 1.4T, 1.6 and 1.8 Sedan - Petrol | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|----|--|--------------------------|----|-----|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|---|--|
| SERVICE INTERVAL every KMs (x1000) | | 15 | 30 | 45 | 60 | 75 | 90 | 105 | 120 | 135 | 150 | 165 | 180 | 195 | 210 | 225 | 240 | 255 | 270 | 285 | 300 | 315 | 330 | 345 | 360 | | |
| or MONTHS, whichever occurs first | | 12 | 24 | 36 | 48 | 60 | 72 | 84 | 96 | 108 | 120 | 132 | 144 | 156 | 168 | 180 | 192 | 204 | 216 | 228 | 240 | 252 | 264 | 276 | 288 | | |
| ENGINE | 1 | Engine Oil and Filter | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | |
| | 2 | Fuel Filter | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | |
| | 3 | Check and Inspect Positive crankcase ventilation (PCV) system | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | |
| | 4 | Fuel leakage at tank, cap and pipes | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | |
| | 5 | Air Filter Element | I/C | R | I/C | R | I/C | R | I/C | R | I/C | R | I/C | R | I/C | R | I/C | R | I/C | R | I/C | R | I/C | R | I/C | R | |
| | 6 | Spark plugs | - | - | - | R | - | - | - | R | - | - | - | R | - | - | - | R | - | - | - | R | - | - | - | R | |
| | 7 | Check and inspect camshaft chain and guides | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | |
| | 8 | All engine drive belts for tension & damage and check pulley condition (replace if needed) | - | I | - | I | - | I | - | I | - | I | - | I | - | I | - | I | - | I | - | I | - | I | - | I | |
| | 9 | Run engine through operating range & check for excessive smoke | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | |
| | 10 | Coolant system for leaks & check coolant concentration (50% glycol) | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | |
| | 11 | Coolant concentration (50% glycol) | Replace every 60 months. | | | | | | | | | | | | | | | | | | | | | | | | |
| | 12 | Valve Clearances | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | |
| | 13 | Radiator core and fan operation | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | |
| | 14 | Exhaust system & mountings & hoses & pipes in engine comp. for tightness or damage | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | |
| SERVICE BRAKE | 15 | Brake pedal function, travel and free play | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | | |
| | 16 | Brake fluid level | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | | |
| | 17 | Brake fluid | Replace every 24 months. | | | | | | | | | | | | | | | | | | | | | | | | |
| | 18 | Front disc brake pads & discs for wear | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | | |
| CLUTCH | 19 | Handbrake linings & drums for wear | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | | |
| | 20 | Brake pipes & hoses for leaks, loose connections or damage | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | | |
| | 21 | Clutch pedal function, travel and free play & fluid leaks | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | | |
| | 22 | Clutch fluid level* | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | | |
| TRANSMISSION | 23 | Clutch cable* | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | | |
| | 24 | Clutch fluid* | Replace every 24 months. | | | | | | | | | | | | | | | | | | | | | | | | |
| | 25 | Check & Inspect transmission for leaks | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | | |
| | 26 | Manual transmission fluid | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | | |
| | 27 | Front drive axle CV joints, condition of rubber dust covers | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | | |

* Where fitted

Service Schedule

Chevrolet Cruze Sedan



**COMPLETE
CARE**

R = Replace A = Adjust T = Torque L = Lubricate C = Clean

I = Inspection - after inspection clean and correct, or replace as necessary

| Cruze 1.4T, 1.6 and 1.8 Sedan - Petrol | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|----|---|---|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|---|
| SERVICE INTERVAL every KMs (x1000) | | 15 | 30 | 45 | 60 | 75 | 90 | 105 | 120 | 135 | 150 | 165 | 180 | 195 | 210 | 225 | 240 | 255 | 270 | 285 | 300 | 315 | 330 | 345 | 360 | |
| or MONTHS, whichever occurs first | | 12 | 24 | 36 | 48 | 60 | 72 | 84 | 96 | 108 | 120 | 132 | 144 | 156 | 168 | 180 | 192 | 204 | 216 | 228 | 240 | 252 | 264 | 276 | 288 | |
| STEERING | 28 | Steering wheel play and function | I | I | I | I | I | I | I | I | I | R | I | I | I | I | I | I | I | I | I | R | I | I | I | I |
| | 29 | Power steering oil level and leaks | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 30 | Steering rack and ball joint rubber boots | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 31 | Wheel alignment inspection - offered to customer | Recommended every service- cost for customer's account | | | | | | | | | | | | | | | | | | | | | | | |
| PARKING BRAKE | 32 | Parking brake function - lever travel & ratchet for damage | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 33 | Parking brake | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 34 | Suspension front & rear - strut rubbers, bushes, tie-rod ends & link arms | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 35 | Shock absorbers for leaks and looseness | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| WHEELS | 36 | Car mountings for looseness and damage | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 37 | Tyre Pressure - Check and correct | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 38 | Inspect tyres & rims for damage | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 39 | Wheel bearing (front & rear) - Inspect for bearing play | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| ELECTRICAL EQUIPMENT | 40 | Rotate tyres & torque wheel nuts as per specification | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T |
| | 41 | Vehicle systems - Check all ECUs for DTCs & reset service interval* | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 42 | Starter and alternator function / output | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 43 | Battery electrolyte level and specific gravity* | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 44 | Wiring harness and terminals for looseness or damage | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 45 | Lights, hooter, instruments, air con, radio, turn signal, wiper blades & w/screen washers | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 46 | Remote key battery* | I | R | I | R | I | R | I | R | I | R | I | R | I | R | I | R | I | R | I | R | I | R | I | R |
| BODY | 47 | Airbag system and Airbag warning light, visual inspection | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 48 | Seatbelts function and damage | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 49 | Inspect chassis and body for corrosion | Attach copy of Sheet to Job Card at every service interval | | | | | | | | | | | | | | | | | | | | | | | |
| | 50 | Bolts and nuts on chassis and body | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 51 | Door, Bonnet, Tail gate, locks and door restraints Check/Adjust/Clean/Lubricate | I | L | I | L | I | L | I | L | I | L | I | L | I | L | I | L | I | L | I | L | I | L | I | L |
| OTHER | 52 | Pollen filter* | I | R | I | R | I | R | I | R | I | R | I | R | I | R | I | R | I | R | I | R | I | R | I | R |
| | 53 | Air conditioner drain pipe* | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 54 | Check for open RECALLS /SERVICE CAMPAIGNS | Check and complete repair (if required) at every service interval | | | | | | | | | | | | | | | | | | | | | | | |
| | 55 | Road Test | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | |

* Where fitted

Service Schedule

Chevrolet Cruze Sedan



COMPLETE CARE

R = Replace A = Adjust T = Torque L = Lubricate C = Clean

I = Inspection - after inspection clean and correct, or replace as necessary

| Cruze 2.0 Sedan- Diesel | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|----|--|--------------------------|----|-----|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|---|--|
| SERVICE INTERVAL every KMs (x1000) | | 15 | 30 | 45 | 60 | 75 | 90 | 105 | 120 | 135 | 150 | 165 | 180 | 195 | 210 | 225 | 240 | 255 | 270 | 285 | 300 | 315 | 330 | 345 | 360 | | |
| or MONTHS, whichever occurs first | | 12 | 24 | 36 | 48 | 60 | 72 | 84 | 96 | 108 | 120 | 132 | 144 | 156 | 168 | 180 | 192 | 204 | 216 | 228 | 240 | 252 | 264 | 276 | 288 | | |
| ENGINE | 1 | Engine Oil and Filter | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | |
| | 2 | Fuel Filter | - | R | - | R | - | R | - | R | - | R | - | R | - | R | - | R | - | R | - | R | - | R | - | R | |
| | 3 | Check and Inspect Positive crankcase ventilation (PCV) system | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | |
| | 4 | Fuel leakage at tank, cap and pipes | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | |
| | 5 | Air Filter Element | I/C | R | I/C | R | I/C | R | I/C | R | I/C | R | I/C | R | I/C | R | I/C | R | I/C | R | I/C | R | I/C | R | I/C | R | |
| | 6 | Spark plugs | - | - | - | - | - | R | - | - | - | - | - | R | - | - | - | - | - | R | - | - | - | - | - | R | |
| | 7 | Check and inspect camshaft chain and guides | - | I | - | I | - | I | - | I | - | I | - | I | - | I | - | I | - | I | - | I | - | I | - | I | |
| | 8 | All engine drive belts for tension & damage and check pulley condition (replace if needed) | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | |
| | 9 | Run engine through operating range & check for excessive smoke | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | |
| | 10 | Coolant system for leaks & check coolant concentration (50% glycol) | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | |
| | 11 | Coolant concentration (50% glycol) | Replace every 60 months. | | | | | | | | | | | | | | | | | | | | | | | | |
| | 12 | Valve Clearances | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | |
| | 13 | Radiator core and fan operation | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | |
| | 14 | Exhaust system & mountings & hoses & pipes in engine comp. for tightness or damage | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | |
| SERVICE BRAKE | 15 | Brake pedal function, travel and free play | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | | |
| | 16 | Brake fluid level | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | | |
| | 17 | Brake fluid | Replace every 24 months. | | | | | | | | | | | | | | | | | | | | | | | | |
| | 18 | Front disc brake pads & discs for wear | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | | |
| CLUTCH | 19 | Handbrake linings & drums for wear | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | | |
| | 20 | Brake pipes & hoses for leaks, loose connections or damage | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | | |
| | 21 | Clutch pedal function, travel and free play & fluid leaks | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | | |
| | 22 | Clutch fluid level* | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | | |
| TRANSMISSION | 23 | Clutch cable* | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | | |
| | 24 | Clutch fluid* | Replace every 24 months. | | | | | | | | | | | | | | | | | | | | | | | | |
| | 25 | Check & Inspect transmission for leaks | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | | |
| | 26 | Manual transmission fluid | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | | |
| | 27 | Front drive axle CV joints, condition of rubber dust covers | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | | |

* Where fitted

Service Schedule

Chevrolet Cruze Sedan



COMPLETE CARE

R = Replace A = Adjust T = Torque L = Lubricate C = Clean

I = Inspection - after inspection clean and correct, or replace as necessary

| Cruze 2.0 Sedan - Diesel | | | | | | | | | | | | | | | | | | | | | | | | | |
|------------------------------------|----|---|----|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| SERVICE INTERVAL every KMs (x1000) | | 15 | 30 | 45 | 60 | 75 | 90 | 105 | 120 | 135 | 150 | 165 | 180 | 195 | 210 | 225 | 240 | 255 | 270 | 285 | 300 | 315 | 330 | 345 | 360 |
| or MONTHS, whichever occurs first | | 12 | 24 | 36 | 48 | 60 | 72 | 84 | 96 | 108 | 120 | 132 | 144 | 156 | 168 | 180 | 192 | 204 | 216 | 228 | 240 | 252 | 264 | 276 | 288 |
| STEERING | 28 | I | I | I | I | I | I | I | I | I | R | I | I | I | I | I | I | I | I | I | R | I | I | I | I |
| | 29 | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 30 | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 31 | Recommended every service- cost for customer's account | | | | | | | | | | | | | | | | | | | | | | | |
| PARKING BRAKE | 32 | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 33 | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 34 | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 35 | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| WHEELS | 36 | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 37 | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 38 | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 39 | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| ELECTRICAL EQUIPMENT | 40 | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T | T |
| | 41 | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 42 | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 43 | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 44 | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 45 | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 46 | I | R | I | R | I | R | I | R | I | R | I | R | I | R | I | R | I | R | I | R | I | R | I | R |
| BODY | 47 | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 48 | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 49 | Attach copy of Sheet to Job Card at every service interval | | | | | | | | | | | | | | | | | | | | | | | |
| | 50 | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 51 | I | L | I | L | I | L | I | L | I | L | I | L | I | L | I | L | I | L | I | L | I | L | I | L |
| | 52 | I | R | I | R | I | R | I | R | I | R | I | R | I | R | I | R | I | R | I | R | I | R | I | R |
| ROAD TEST | 53 | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| | 54 | Check and complete repair (if required) at every service interval | | | | | | | | | | | | | | | | | | | | | | | |
| | 55 | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |