

Service Schedule Chevrolet Spark Lite



**COMPLETE
CARE**

- 1. This Service Schedule will have preference over the Owner's Manual and Warranty & Service Guide*
- 2. Refer to the Warranty and Service Guide for Severe Driving Conditions.*
- 3. Consult the Owner/Customer prior to any additional work being carried out as an additional cost will be charged for items not covered under warranty.*
- 4. ALL SERVICE INTERVALS ARE LINKED TO KILOMETERS AND MONTHS, WHICHEVER OCCURS FIRST.*



Service Schedule

Chevrolet Spark Lite



COMPLETE CARE

R = Replace A = Adjust T = Torque L = Lubricate C = Clean

I = Inspection - after inspection clean and correct, or replace as necessary

Spark Lite 0.8 and 1.0 - Petrol

SERVICE INTERVAL every KMs (x1000)		15	30	45	60	75	90	105	120	135	150	165	180	195	210	225	240	255	270	285	300	315	330	345	360	
or MONTHS, whichever occurs first		12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216	228	240	252	264	276	288	
ENGINE	1	Engine Oil and Filter	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
	2	Fuel Filter	-	R	-	R	-	R	-	R	-	R	-	R	-	R	-	R	-	R	-	R	-	R	-	R
	3	Check and Inspect Positive crankcase ventilation (PCV) system	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	4	Fuel leakage at tank, cap and pipes	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	5	Air Filter Element	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R
	6	Spark plugs	-	R	-	R	-	R	-	R	-	R	-	R	-	R	-	R	-	R	-	R	-	R	-	R
	7	Check and inspect camshaft chain and guides	I	I	I	I	R	I	I	I	I	R	I	I	I	I	R	I	I	I	I	R	I	I	I	I
	8	All engine drive belts for tension & damage and check pulley condition (replace if needed)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	9	Run engine through operating range & check for excessive smoke	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	10	Coolant system for leaks & check coolant concentration (50% glycol)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	11	Coolant concentration (50% glycol)	Replace every 60 months.																							
	12	Valve Clearances	-	-	A	-	-	A	-	-	A	-	-	A	-	-	A	-	-	A	-	-	A	-	-	A
	13	Radiator core and fan operation	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	14	Exhaust system & mountings & hoses & pipes in engine comp. for tightness or damage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
SERVICE BRAKE	15	Brake pedal function, travel and free play	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	16	Brake fluid level	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	17	Brake fluid	Replace every 24 months.																							
	18	Front disc brake pads & discs for wear	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
CLUTCH	19	Handbrake linings & drums for wear	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	20	Brake pipes & hoses for leaks, loose connections or damage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	21	Clutch pedal function, travel and free play & fluid leaks	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	22	Clutch fluid level*	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
TRANSMISSION	23	Clutch cable*	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	24	Clutch fluid*	Replace every 24 months.																							
	25	Front drive axle CV joints, condition of rubber dust covers	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	26	Steering wheel play and function	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	27	Power steering oil level and leaks	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	

* Where fitted

Service Schedule

Chevrolet Spark Lite



COMPLETE CARE

R = Replace A = Adjust T = Torque L = Lubricate C = Clean

I = Inspection - after inspection clean and correct, or replace as necessary

Spark Lite 0.8 and 1.0 - Petrol																									
SERVICE INTERVAL every KMs (x1000)		15	30	45	60	75	90	105	120	135	150	165	180	195	210	225	240	255	270	285	300	315	330	345	360
or MONTHS, whichever occurs first		12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216	228	240	252	264	276	288
STEERING	28	Steering rack and ball joint rubber boots																							
	29	Wheel alignment inspection (to be offered to customer) Recommended every service- cost for customer's account																							
PARKING BRAKE	30	Parking brake function - lever travel & ratchet for damage																							
	31	Parking brake																							
	32	Suspension front & rear - strut rubbers,bushes,tie-rod ends & link arms																							
	33	Shock absorbers for leaks and looseness																							
WHEELS	34	Cab mountings for looseness and damage																							
	35	Tyre Pressure - Check and correct (incl spare)																							
	36	Inspect tyres & rims for damage (incl spare)																							
	37	Wheel bearing (front & rear) - Inspect for bearing play																							
ELECTRICAL EQUIPMENT	38	Rotate tyres & torque wheel nuts as per specification																							
	39	Vehicle systems - Check all ECUs for DTCs & reset service interval*																							
	40	Wiring harness and terminals for looseness or damage																							
	41	Battery electrolyte level and specific gravity*																							
	42	Wiring harness and terminals for looseness or damage																							
	43	Lights, hooter, instruments, air con, radio, turn signal , wiper blades & w/screen washers																							
BODY	44	Remote key battery*																							
	45	Airbag system and Airbag warning light, visual inspection																							
	46	Seatbelts function and damage																							
	47	Inspect chassis and body for corrosion Attach copy of Sheet to Job Card at every service interval																							
	48	Bolts and nuts on chassis and body																							
	49	Door, Bonnet, Tail gate, locks and door restraints Check/Adjust/Clean/Lubricate																							
BODY	50	Pollen filter*																							
	51	Air conditioner drain pipe*																							
	52	Check for open RECALLS /SERVICE CAMPAIGNS Check and complete repair (if required) at every service interval																							
	53	Road Test																							

* Where fitted