


Service Schedule Chevrolet Trailblazer

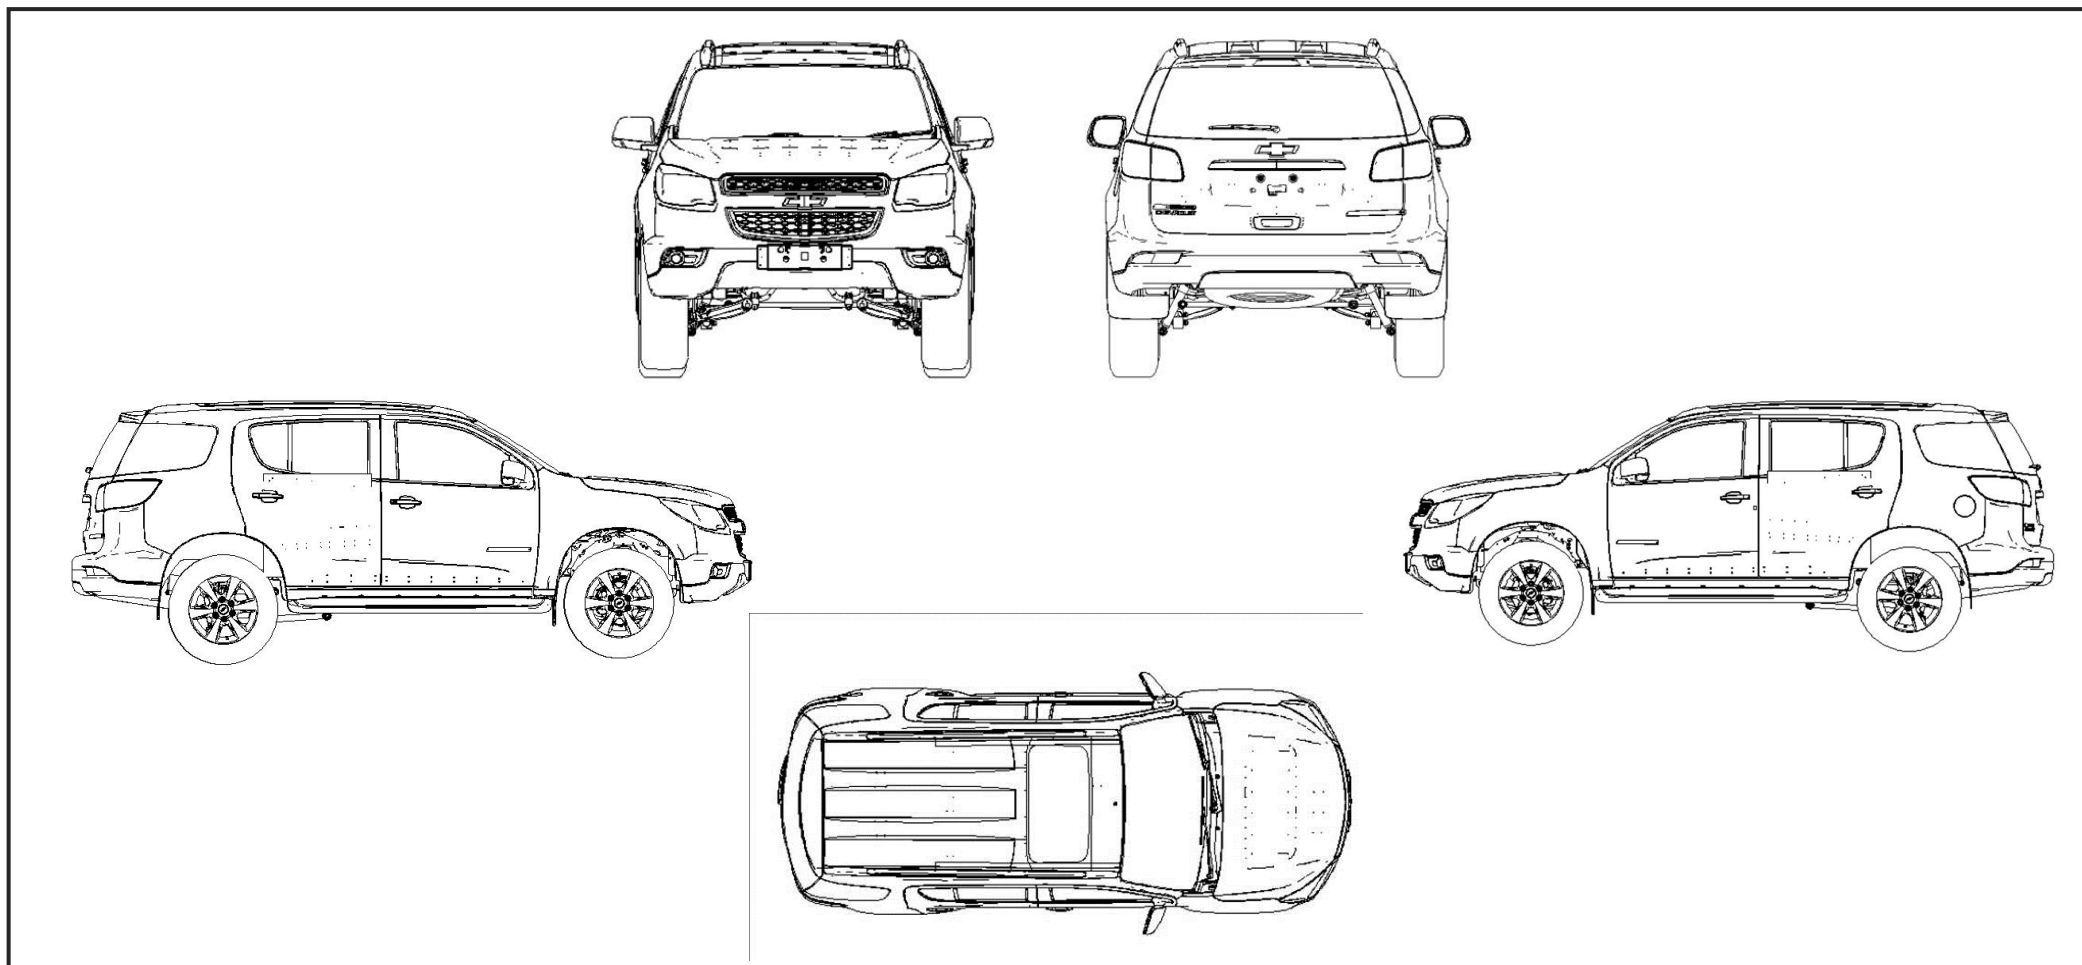

**COMPLETE
CARE**

- 1. This Service Schedule will have preference over the Owner's Manual and Warranty & Service Guide**
- 2. Refer to the Warranty and Service Guide for Severe Driving Conditions.**
- 3. Consult the Owner/Customer prior to any additional work being carried out as an additional cost will be charged for items not covered under warranty.**
- 4. ALL SERVICE INTERVALS ARE LINKED TO KILOMETERS AND MONTHS, WHICHEVER OCCURS FIRST.**



Service Schedule

Chevrolet Trailblazer



COMPLETE CARE

R = Replace A = Adjust T = Torque L = Lubricate C = Clean

I = Inspection - after inspection clean and correct, or replace as necessary

Trailblazer 2.5 and 2.8 - Diesel

SERVICE INTERVAL every KMs (x1000)		15	30	45	60	75	90	105	120	135	150	165	180	195	210	225	240	255	270	285	300	315	330	345	360		
		or MONTHS, whichever occurs first		12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216	228	240	252	264	276	288
ENGINE	1	Engine Oil and Filter	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
	2	Fuel Filter	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
	3	Check and Inspect Positive crankcase ventilation (PCV) system	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	4	Fuel leakage at tank, cap and pipes	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	5	Air Filter Element	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	
	6	Spark plugs	I	I	I	I	I	I	I	I	I	I	R	I	I	I	I	I	I	I	I	I	I	I	R	I	I
	7	Check and inspect camshaft chain and guides	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	8	All engine drive belts for tension & damage and check pulley condition (replace if needed)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	9	Run engine through operating range & check for excessive smoke	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	10	Coolant system for leaks & check coolant concentration (50% glycol)	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
	11	Coolant concentration (50% glycol)	Replace every 60 months.																								
	12	Valve Clearances	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	13	Radiator core and fan operation	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	14	Exhaust system & mountings & hoses & pipes in engine comp. for tightness or damage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
SERVICE BRAKE	15	Brake pedal function, travel and free play	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
	16	Brake fluid level	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
	17	Brake fluid	Replace every 24 months.																								
	18	Front disc brake pads & discs for wear	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
	19	Handbrake linings & drums for wear	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
CLUTCH	20	Brake pipes & hoses for leaks, loose connections or damage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
	21	Clutch pedal function, travel and free play & fluid leaks	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
	22	Clutch fluid level*	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
	23	Clutch cable*	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
TRANSMISSION. & TRANSFER CASE	24	Clutch fluid*	Replace every 24 months.																								
	22	Manual transmission fluid	I	R	I	I	I	I	I	I	R	I	I	I	I	I	I	R	I	I	I	I	I	I	R	I	
	23	Automatic transmission fluid	I	I	I	I	I	I	I	I	R	I	I	I	I	I	I	I	I	R	I	I	I	I	I	I	
24	Transfer case fluid (4X4 only)	I	R	I	I	I	I	I	I	R	I	I	I	I	I	I	R	I	I	I	I	I	I	R	I		

* Where fitted

Service Schedule

Chevrolet Trailblazer



COMPLETE CARE

R = Replace A = Adjust T = Torque L = Lubricate C = Clean

I = Inspection - after inspection clean and correct, or replace as necessary

Trailblazer 2.5 and 2.8 - Diesel																											
SERVICE INTERVAL every KMs (x1000)		15	30	45	60	75	90	105	120	135	150	165	180	195	210	225	240	255	270	285	300	315	330	345	360		
or MONTHS, whichever occurs first		12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216	228	240	252	264	276	288		
PROPSHAFT	25	Universal joints for looseness / excessive wear	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	26	Differential (Front* and Rear)	I	I	I	I	I	I	I	R	I	I	I	I	I	I	I	R	I	I	I	I	I	I	I	R	
FRONT/ REAR AXLE	27	All axle shaft & housing for distortion/damage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	28	Front drive axle CV joints, condition of rubber dust covers	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
STEERING	29	Steering wheel play and function	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	30	Power steering oil level and leaks*	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	31	Steering rack and ball joint rubber boots	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	32	Wheel alignment inspection	Recommended every service- cost for customer's account																								
PARKING BRAKE	33	Parking brake function - lever travel & ratchet	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	34	Parking brake	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	35	Suspension front & rear - strut rubbers, bushes, tie-rod ends & link arms	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	36	Shock absorbers for leaks and looseness	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
WHEELS	37	Cab mountings for looseness and damage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	38	Tyre Pressure - Check and correct	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	39	Inspect tyres & rims for damage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	40	Wheel bearing (front & rear)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	41	Rotate tyres & torque wheel nuts	I	I	I	R	I	I	R	I	I	I	R	I	I	I	R	I	I	I	R	I	I	I	R	I	
ELECTRICAL EQUIPMENT	42	Vehicle systems - Check all ECUs for DTCs & reset service interval*	I	I	I	R	I	I	R	I	I	I	R	I	I	I	R	I	I	I	R	I	I	I	R	I	
	43	Starter and alternator function / output	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	
	44	Battery electrolyte level and specific gravity*	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	45	Wiring harness & terminals - loose/damaged	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	46	Lights, hooter, instruments, air con, radio, turn signal, wiper blades & w/screen washers	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	47	Remote key battery*	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
	48	Airbag system and Airbag warning light, visual inspection	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	
BODY	49	Seatbelts function and damage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	50	Inspect chassis and body for corrosion	Attach copy of Sheet to Job Card at every service interval																								
	51	Bolts and nuts on chassis and body	I	L	I	L	I	L	I	L	I	L	I	L	I	L	I	L	I	L	I	L	I	L	I	L	
	52	Door, Bonnet, Tail gate, locks and door restraints Check/Adjust/Clean/Lubricate	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I
	53	Pollen filter*	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	54	Air conditioner drain pipe*	I	L	I	L	I	L	I	L	I	L	I	L	I	L	I	L	I	L	I	L	I	L	I	L	
	55	Check for open RECALLS /SERVICE CAMPAIGNS	Check and complete repair (if required) at every service interval																								
	56	Road Test	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		

* Where fitted

Service Schedule

Chevrolet Trailblazer



COMPLETE CARE

R = Replace A = Adjust T = Torque L = Lubricate C = Clean

I = Inspection - after inspection clean and correct, or replace as necessary

Trailblazer 3.6 - Petrol																											
SERVICE INTERVAL every KMs (x1000)		15	30	45	60	75	90	105	120	135	150	165	180	195	210	225	240	255	270	285	300	315	330	345	360		
or MONTHS, whichever occurs first		12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216	228	240	252	264	276	288		
ENGINE	1	Engine Oil and Filter	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
	2	Fuel Filter	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
	3	Check and Inspect Positive crankcase ventilation (PCV) system	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	4	Fuel leakage at tank, cap and pipes	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	5	Air Filter Element	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	
	6	Spark plugs	I	I	I	I	I	I	I	I	I	I	R	I	I	I	I	I	I	I	I	I	I	I	R	I	I
	7	Check and inspect camshaft chain and guides	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	8	All engine drive belts for tension & damage and check pulley condition (replace if needed)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	9	Run engine through operating range & check for excessive smoke	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	10	Coolant system for leaks & check coolant concentration (50% glycol)	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
	11	Coolant concentration (50% glycol)	Replace every 60 months.																								
	12	Valve Clearances	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	13	Radiator core and fan operation	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	14	Exhaust system & mountings & hoses & pipes in engine comp. for tightness or damage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
SERVICE BRAKE	15	Brake pedal function, travel and free play	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	16	Brake fluid level	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	17	Brake fluid	Replace every 24 months.																								
	18	Front disc brake pads & discs for wear	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
19	Handbrake linings & drums for wear	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
20	Brake pipes & hoses for leaks, loose connections or damage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
CLUTCH	21	Clutch pedal function, travel and free play & fluid leaks	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	22	Clutch fluid level*	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	23	Clutch cable*	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	24	Clutch fluid*	Replace every 24 months.																								
TRANSMISSION. & TRANSFER CASE	22	Manual transmission fluid	I	R	I	I	I	I	I	R	I	I	I	I	I	I	I	R	I	I	I	I	I	I	R	I	
	23	Automatic transmission fluid	I	I	I	I	I	I	I	R	I	I	I	I	I	I	I	I	I	R	I	I	I	I	I	I	
	24	Transfer case fluid (4X4 only)	I	R	I	I	I	I	I	R	I	I	I	I	I	I	I	R	I	I	I	I	I	I	R	I	

* Where fitted

Service Schedule

Chevrolet Trailblazer



**COMPLETE
CARE**

R = Replace A = Adjust T = Torque L = Lubricate C = Clean

I = Inspection - after inspection clean and correct, or replace as necessary

Trailblazer 3.6 - Petrol																										
SERVICE INTERVAL every KMs (x1000)		15	30	45	60	75	90	105	120	135	150	165	180	195	210	225	240	255	270	285	300	315	330	345	360	
or MONTHS, whichever occurs first		12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216	228	240	252	264	276	288	
PROPSHAFT	25	Universal joints for looseness / excessive wear	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	26	Differential (Front* and Rear)	I	I	I	I	I	I	I	R	I	I	I	I	I	I	I	R	I	I	I	I	I	I	I	R
FRONT/ REAR AXLE	27	All axle shaft & housing for distortion/damage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	28	Front drive axle CV joints, condition of rubber dust covers	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
STEERING	29	Steering wheel play and function	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	30	Power steering oil level and leaks*	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	31	Steering rack and ball joint rubber boots	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	32	Wheel alignment inspection	Recommended every service- cost for customer's account																							
PARKING BRAKE	33	Parking brake function - lever travel & ratchet	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	34	Parking brake	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	35	Suspension front & rear - strut rubbers, bushes, tie-rod ends & link arms	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	36	Shock absorbers for leaks and looseness	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
WHEELS	37	Cab mountings for looseness and damage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	38	Tyre Pressure - Check and correct	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	39	Inspect tyres & rims for damage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	40	Wheel bearing (front & rear)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	41	Rotate tyres & torque wheel nuts	I	I	I	R	I	I	R	I	I	I	R	I	I	I	R	I	I	I	R	I	I	I	R	
ELECTRICAL EQUIPMENT	42	Vehicle systems - Check all ECUs for DTCs & reset service interval*	I	I	I	R	I	I	R	I	I	I	R	I	I	I	R	I	I	I	R	I	I	I	R	
	43	Starter and alternator function / output	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T
	44	Battery electrolyte level and specific gravity*	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	45	Wiring harness & terminals - loose/damaged	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	46	Lights, hooter, instruments, air con, radio, turn signal, wiper blades & w/screen washers	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	47	Remote key battery*	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	48	Airbag system and Airbag warning light, visual inspection	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R
BODY	49	Seatbelts function and damage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	50	Inspect chassis and body for corrosion	Attach copy of Sheet to Job Card at every service interval																							
	51	Bolts and nuts on chassis and body	I	L	I	L	I	L	I	L	I	L	I	L	I	L	I	L	I	L	I	L	I	L	I	L
	52	Door, Bonnet, Tail gate, locks and door restraints Check/Adjust/Clean/Lubricate	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R
	53	Pollen filter*	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	54	Air conditioner drain pipe*	I	L	I	L	I	L	I	L	I	L	I	L	I	L	I	L	I	L	I	L	I	L	I	L
	55	Check for open RECALLS /SERVICE CAMPAIGNS	Check and complete repair (if required) at every service interval																							
	56	Road Test	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	

* Where fitted